

Installation of LR1

Note that if LRI is used with LCA20 a ferrite ring is not required. In all other cases, to meet the Specified EMC Fast transient requirements it is important that the ferrite ring supplied is fitted as per the following instructions.

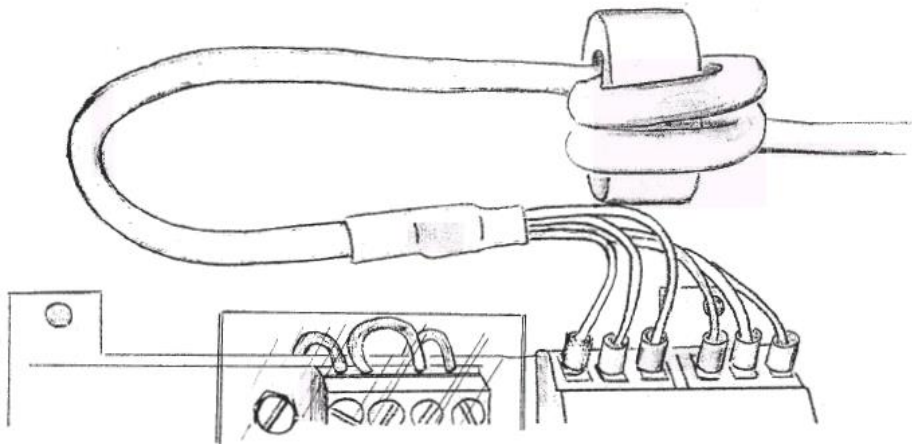


Illustration showing ferrite ring FEC 9640401 fitted to the LR1 relay wiring.

Two turns of the wiring are passed through the ring positioned 12cm from the LR1 end of the cable to improve immunity to electrical fast transients and bursts.